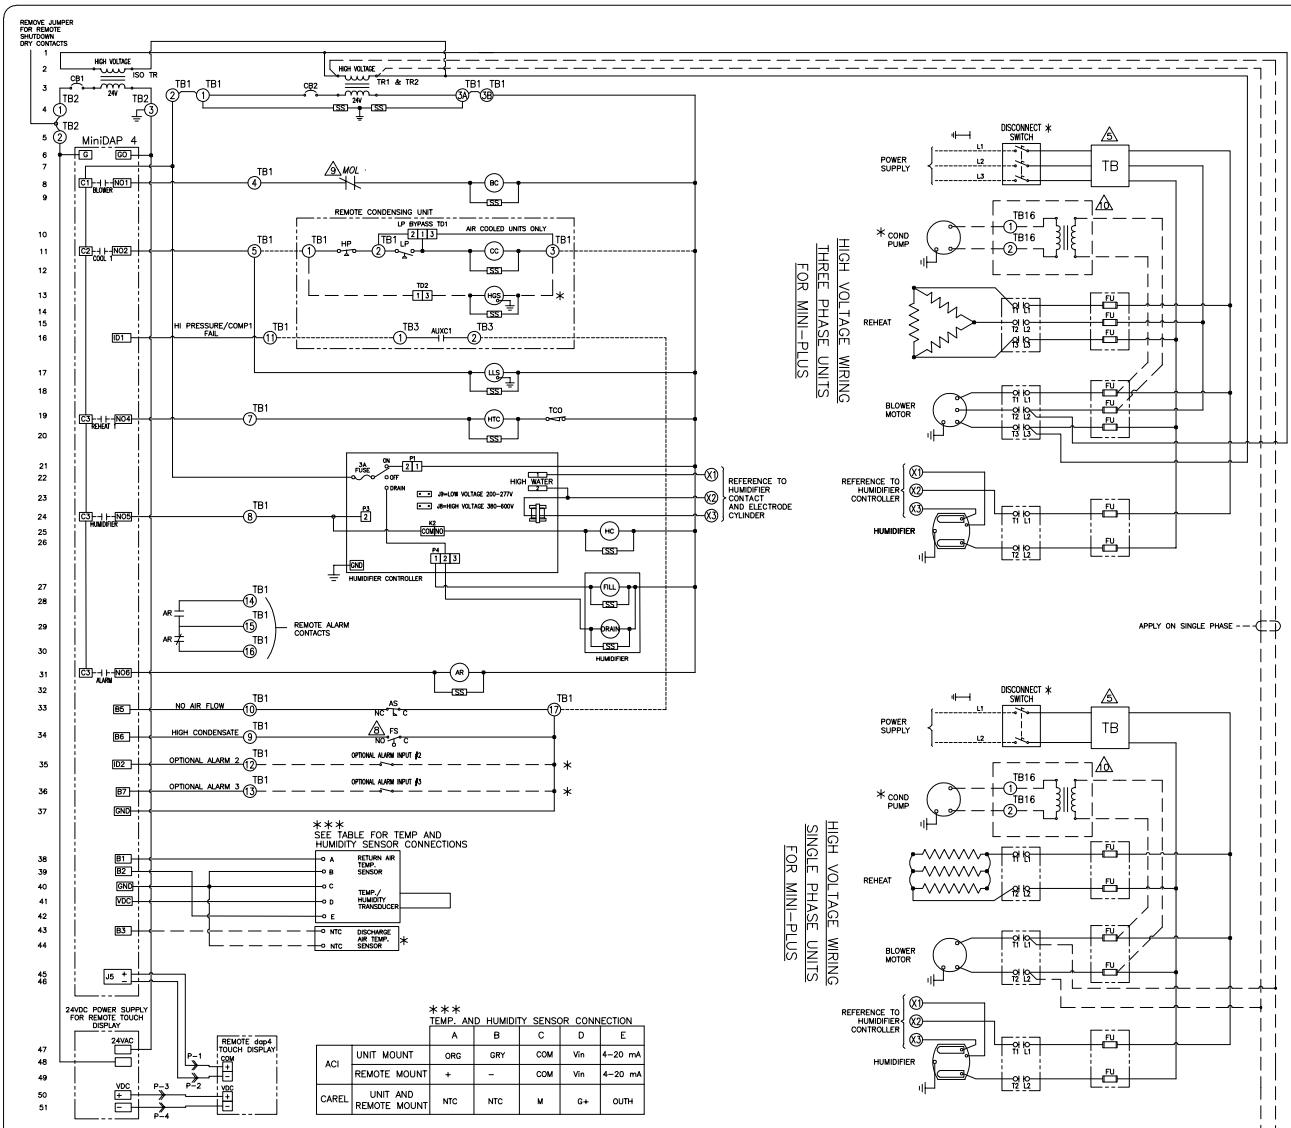

PANEL LEGEND

AR	= ALARM RELAY
AS	= AIR FLOW SWITCH
AUXC	= AUXILIARY CONTACT ON COMPRESSOR CONTACTOR
BC	= BLOWER CONTACTOR
CC	= COMPRESSOR CONTACTOR
ddp4	= DATA ALARM PROCESSOR 4
FS	= FLOAT SWITCH
HC	= HUMIDIFIER CONTACTOR
HGS	= HOT GAS SOLENOID
HP	= HIGH PRESSURE CUTOUT
HTC	= REHEATER CONTACTOR
ISO TR	= HIGH VOLTAGE/24VAC TRANSFORMER W/CB
LLS	= LOW PRESSURE CUTOUT
LP	= MOTOR OVERLOAD SWITCH
MOL	= TERMINAL BLOCK
SS	= THERMAL CUTOUT
TB	= TRANSFORMER
TCO	
TR	
⑯	= TERMINAL BLOCK NO.
------	= FIELD WIRING (18 AWG OR BETTER)
———	= OPTIONAL WIRING
*	= OPTIONAL COMPONENTS
***	= TEMP. AND HUMIDITY SENSOR CONNECTION TABLE
⚠3	= TB MAY BE OMITTED WHEN DISCONNECT SWITCH IS USED
⚠8	= THE STANDARD FLOAT SWITCH IN THE DRAIN PAN THAT COMES WITH CEILING UNITS WILL NEED TO BE REMOVED WHEN THE BLUE DIAMOND PUMP OPTION IS SELECTED
⚠9	= MOL MUST BE WIRED ON THREE PHASE UNITS ONLY
⚠10	= APPLY ON 277, 460 OR 575V UNITS ONLY AND WHEN HAVING 460 AND ON 277V WITH BECKET PUMP

© Copyright 2017 Data Aire, Inc.

dataaire
230 W. BLUERIDGE AVE. ORANGE, CA. 92865

DWG TITLE:
MINI & MINI-PLUS WITH OUTDOOR CONDENSING UNIT – AO WITH MINI ddp4 PANEL

JOB NO:	DRAWN BY: *E. BARRIENTOS*
CREATION DATE: *06-05-2017*	CHECKED BY: *BELTRAN*
OPTION:	REVISION DATE: *03-24-2020*
DIAGRAM NO: *DAM-S-906 XY*	REVISION: *H*