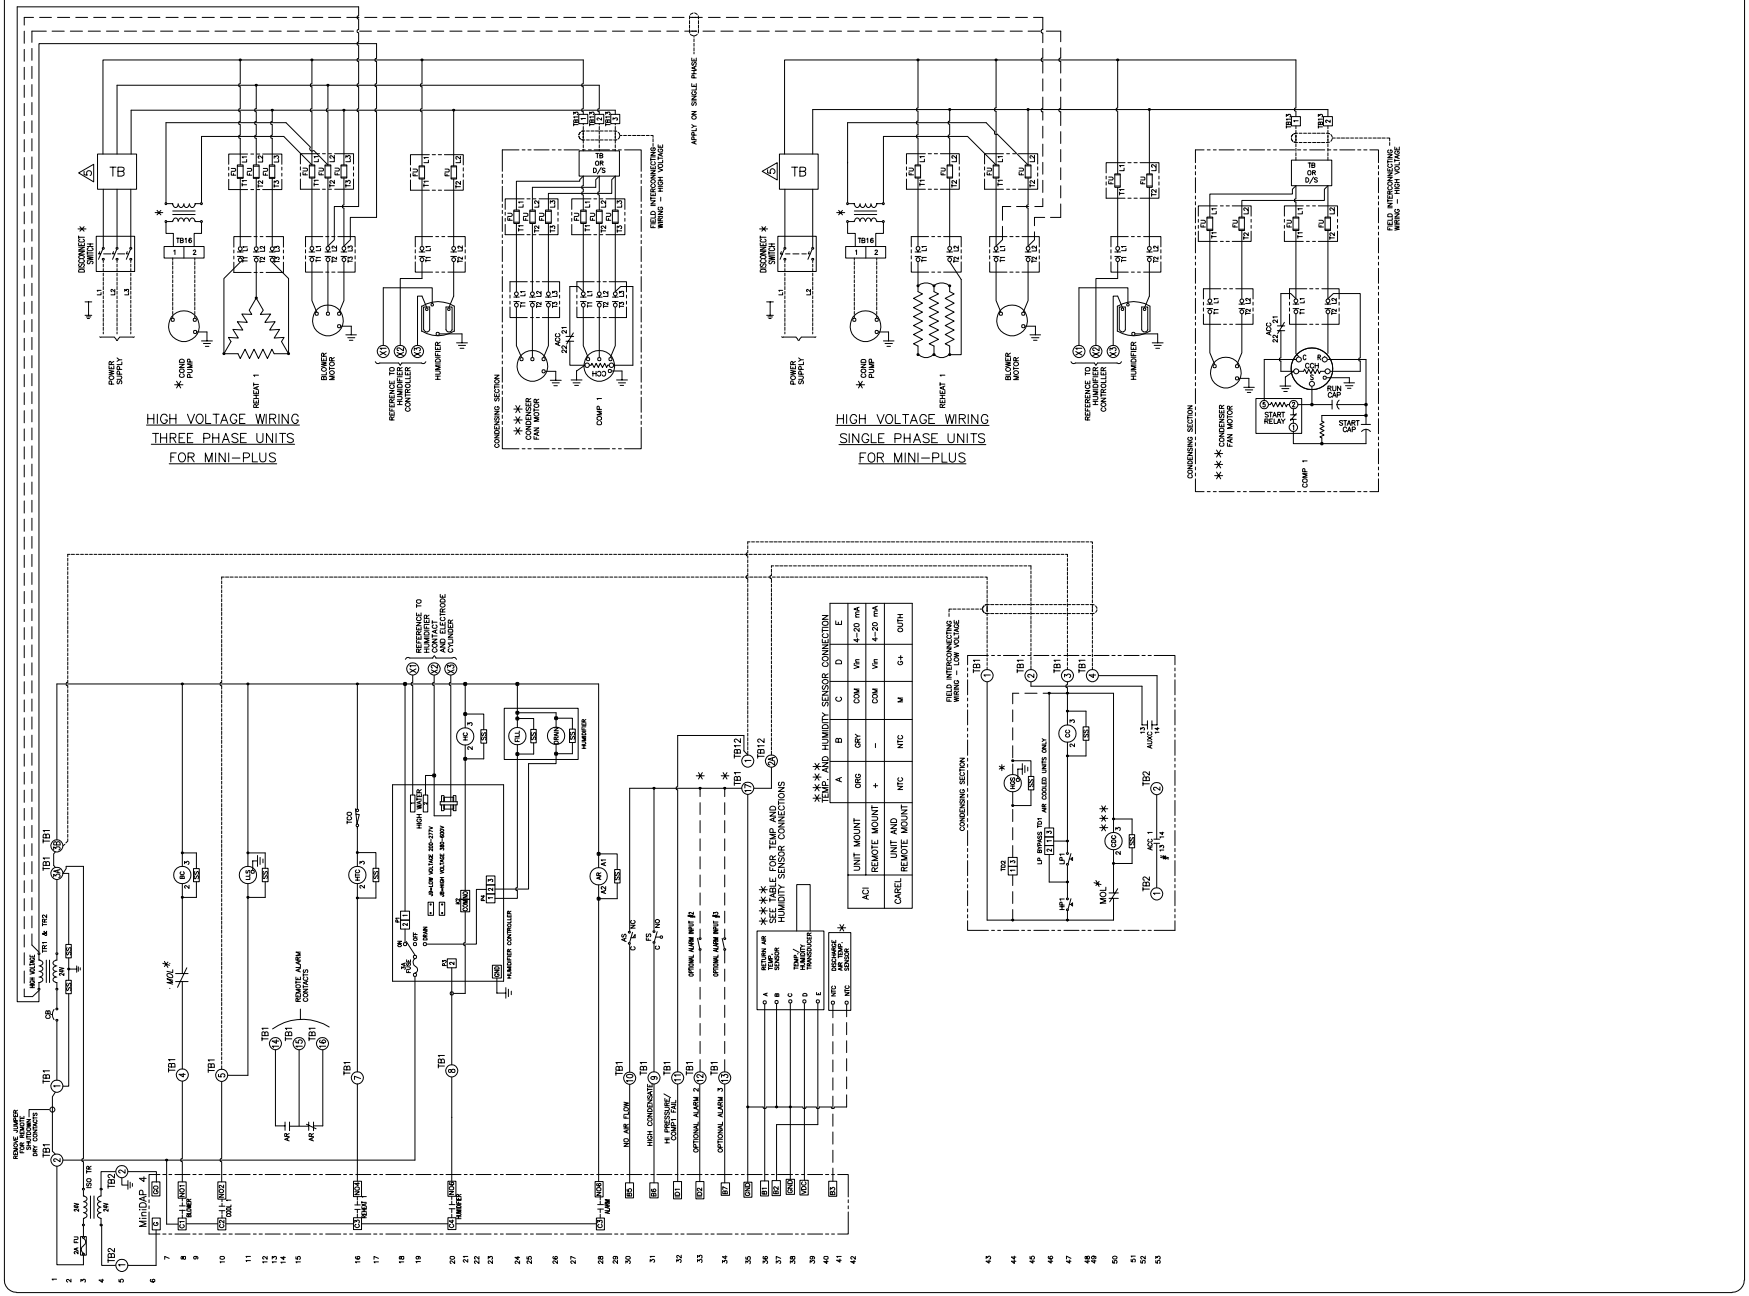

PANEL LEGEND

ACC	=	AUXILIARY COMPRESSOR CONTACT
AR	=	ALARM RELAY
AS	=	AIR FLOW SWITCH
AUXC	=	AUXILIARY CONTACT ON COMPRESSOR
BC	=	BLOWER CONTACTOR
BF	=	BLOWER FUSE
CB	=	CIRCUIT BREAKER
CC	=	COMPRESSOR CONTACTOR
CCH	=	CRANKCASE HEATER
CDC	=	CONDENSER MOTOR CONTACTOR
CF	=	COMPRESSOR FUSE
CMR	=	CONDENSER MOTOR RECEPTACLE
CTS	=	CONDENSER THERMOSTAT SWITCH
dap4	=	DATA ALARM PROCESSOR 4
DP	=	DIFFERENTIAL PRESSURE SWITCH
DS	=	DISCONNECT SWITCH
ER	=	ENERGY SAVER RELAY
EXP	=	EXPANSION MODULE
FU	=	FUSE
FS	=	FLOAT SWITCH
HC	=	HUMIDIFIER CONTACTOR
HF	=	HUMIDIFIER FUSE
HGS	=	HOT GAS SOLENOID
HP	=	HIGH PRESSURE CUTOUT
HTC	=	REHEATER CONTACTOR
HTF	=	REHEATER FUSE
HUM	=	HUMIDIFIER
ITR	=	24V TO 24V ISOLATION TRANSFORMER
LLS	=	LIQUID LINE SOLENOID
LP	=	LOW PRESSURE CUTOUT
MOS	=	MANUAL OVERRIDE SWITCH
MOL	=	MOTOR OVERLOAD SWITCH
OLR	=	COMPRESSOR OVERLOAD RELAY
SS	=	SURGE SUPPRESSOR
TB	=	TERMINAL BLOCK
TCO	=	THERMAL CUTOUT
TD	=	TIME DELAY
TR	=	TRANSFORMER
WS	=	WATER SENSING CHANGEOVER THERMOSTAT

N = TERMINAL BLOCK NO.

NORTEC TERMINAL STRIP CONNECTION

\- - - - - = FIELD WIRING (18 AWG OR BETTER)

\- - - = OPTIONAL WIRING

\# = WATER COOL ONLY.

* = OPTIONAL COMPONENTS

** = 2 REHEAT ELEMENTS FOR MINI-SERIES
3 REHEAT ELEMENTS FOR MINI-PLUS SERIES.

*** = AIR COOLED ONLY.

**** = TEMP. AND HUMIDITY SENSOR CONNECTION TABLE

5 = TB MAY BE OMITTED WHEN DISCONNECT SWITCH IS USED

© Copyright 2017 Data Aire, Inc.

dataaire
230 W. BLUERIDGE AVE. ORANGE, CA. 92865

DWG TITLE:
MINI & MINI-PLUS
INDOOR SPLIT SYSTEM
-AI & -WS
WITH MINI dap4 PANEL

JOB NO:	DRAWN BY: *M. COCHRAN*
PROJECT NO: *DAMS907XY*	CHECKED BY: *P. BELTRAN*
	EFFECTIVITY DATE: *11-05-2018*
OPTION:	REVISION: *D*

DIAGRAM NO:
DAM-S-907 XY